

How to use digital channel of ZT-9908 dPMR radio

1. Set frequency, such as 469.962500



2. Softly press “#”, screen display: ID CODE:-----



3. Type ID Code (6 numbers ) such as 000011



4. Set same for another radio ,press call



5. Press PTT,call another digital radio



Tips: PTT ID may expire in a term,you can set time on PC

Thanks for your choose ZASTONE Radio,for more setting ,please use Programming cable.